







SAVVY 8 PLUS

Diagnosing Faults Flash Code Guide

When turning the ignition on, the ECU will flash to indicate there is a fault and the speedo will display a letter & number Code



Note the error code on the display and refer to guide below for diagnosis

Fault Description	Speedo Error display	ECU Number of Flashes
Low Battery Voltage	E2	
High Battery Voltage	E3	
Brake/Solenoid Fault/ Freewheel	E5	
Speed Pot Fault	E7	
Throttle Fault	E7	
Motor Multifunction Disconnected	E8	
Possible Controller Fault	E9	